


Aura Air Pro

Indoor Air Filtration, Disinfection and Real Time Management



The World's First 4 Stage Air Purification, Disinfection, and Real Time Monitoring System

4 Stages of Active Filtration and Disinfection

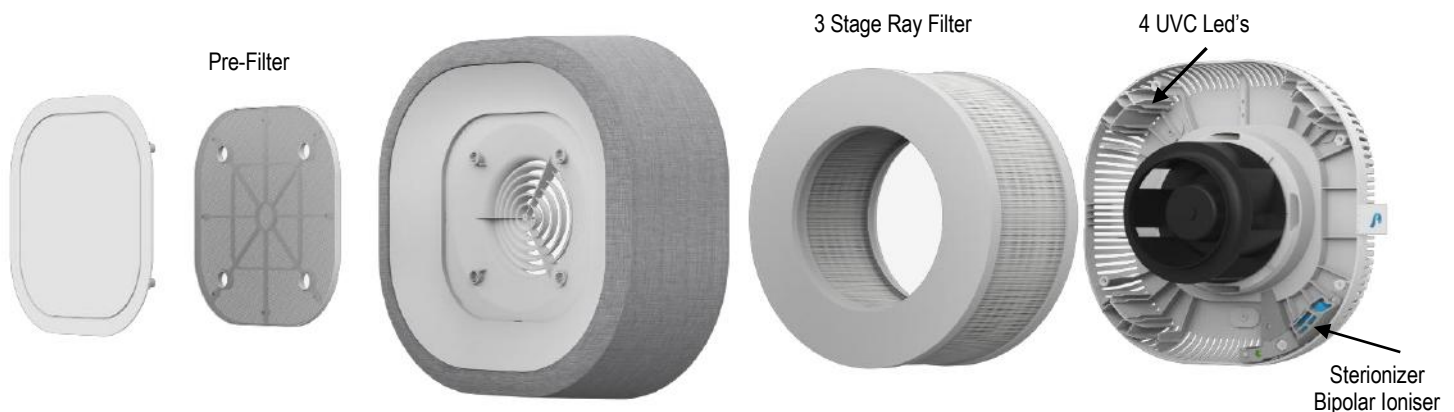

Stage 1: Pre-Filter - Filters out large particles of dust, pollen, allergens, animal hair, etc.

Stage 2: The Patented Ray Filter – The Ray filter has 3 parts:

- **HEPA** – 99.98% effective particle filter to 0.3 microns
- **Carbon Layer** – absorbs VOC's and Odours
- **Smart Copper Fabric** – a smart fabric consisting of a copper layer filter that filters bacteria, viruses and more

Stage 3: 4 UVC Led's – The latest UVC Technology effective in neutralizing bacteria, viruses and parasites

Stage 4: The Sterionizer – A **Bi-Polar ionizer** that creates both positive and negative ions that are proven to deactivate viruses including SARS-CoV-2 coronavirus


V3-0521 NIOS

REAL-TIME DETECTION & IAQ MONITORING

Your Aura Air PRO has **8 built in sensors** that detect your indoor and outdoor air quality and displays this information on your Aura Air PRO Smartphone app (IOS or Android) tablet or computer.

Monitors Smoke, CO, CO₂, PM_{2.5}, PM₁₀, VOC's, Temperature and Humidity in real time.

Aura Air is also compatible with Alexa, Google Home and IFTTT

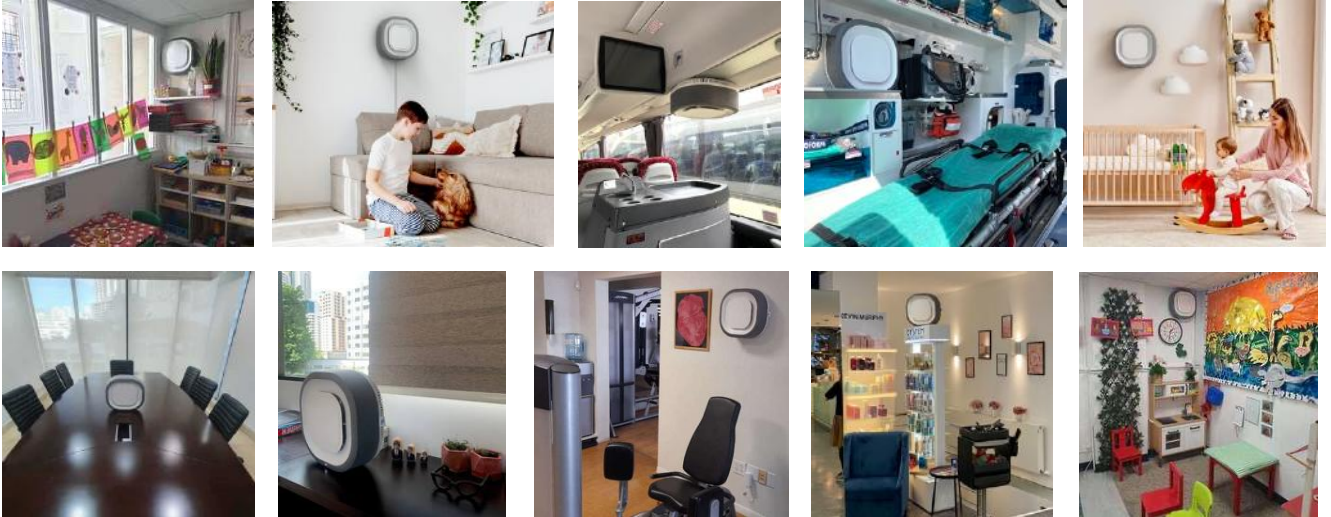

Aura Air Pro can be installed in a boardroom, office, nursery, ambulance gym, hair salon, classroom, clinic, pre-school or bus.

HOSPITAL CORONAVIRUS TRIALS AND RESULTS

Since August of 2019, the Aura Air Indoor Filtration and Disinfection Unit has been rigorously tested for effectiveness, including a 2 year trial at one of the world's top 10 hospitals.

At this hospital's Department of General Surgery and Oncological Surgery, Aura Air was installed at numerous high risk areas, including SARS-CoV-2 (Covid-19) Coronavirus wards.

Aura Air was able to successfully remove many high risk pathogens including the H1N1 and H5N1 Influenza Virus (which are harder to eliminate than Covid-19).

Then in May 2020, Aura Air expanded their testing to include the coronavirus. The results from this trial proved that Aura Air eliminated more than 99.9% of the Coronavirus in 10 minutes.



Sample	Duration of treatment		
	10 min.	20 min.	30 min.
Aura Air treated Low ACOR conc.	99.99999	99.99975	99.99996
Aura Air treated High ACOR conc.	99.98325	99.93515	99.68452

Table 2: Coronavirus Reduction Ratio (normalized results).