


UV SG3000/4200/7000/15,000

PROFESSIONAL PORTABLE UV OZONE GENERATORS FOR ODOUR REMOVAL AND DISINFECTION

Exclusively manufactured in Canada
only for ProMedUSA Pte Ltd

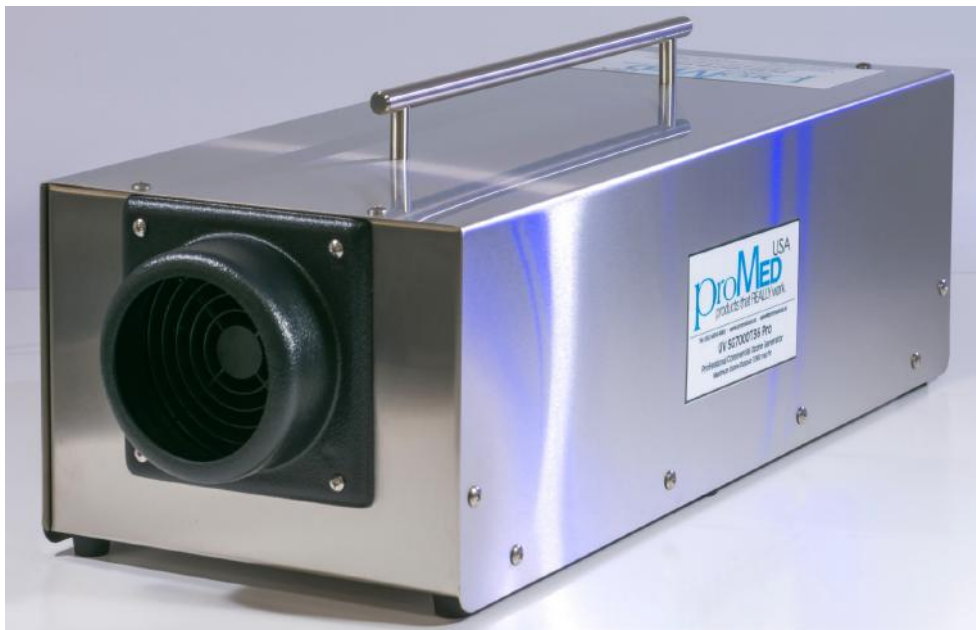

- **OZONE OUTPUT:** MODEL UV SG3000 – 600 to 3000 Mg/Hr
MODEL UV SG4200 - 600 to 4200 Mg/Hr
MODEL UV SG7000 – 1200 to 7000 Mg/Hr
MODEL UV SG15,000 – 5,000 to 15,000 Mg/Hr
- **ADJUSTABLE OUTPUT:** UP TO 7 OZONE OUTPUT LEVELS
- **DIMENSIONS:** 60 cm X 23 cm X 18 cm; **WEIGHT:** 8.0 kg to 13 kg
- **CONSTRUCTION:** 18 GAUGE 316 BRUSHED STAINLESS STEEL
- **UNIT WARRANTY:** 6 YEAR INTERNATIONAL WARRANTY
- **TUBE WARRANTY:** 2 YEAR WARRANTY on our Made in USA UV TUBES
- **TREATMENT AREA:** FRESHEN 350 M³ to 2000 M³ SPACE in about 10 MINUTES; FRESHEN up to 60,000 M³ SPACE in 1-2 HOURS

ProMedUSA Pte Ltd • 111 North Bridge Road • #08-27 Peninsula Plaza • Singapore 179098
Tel: (65) 6836-9665 • www.promedusa.us • sales@promedusa.us

SINGAPORE • MALAYSIA • INDONESIA • BRUNEI • THAILAND • CAMBODIA • MYANMAR • VIETNAM • CHINA

Technical Details

OVERVIEW:	The ProMedUSA Model UV-SG3000/4200/7000 and 15,000 series Ozone Generators are designed for use as a very high output, commercial portable, odour removal and disinfection tool. They are ideal for use in Bin Centres and Grease Trap Rooms, Ballrooms, Hotel & Property Engineering Renovation Odour Removal, Mould Remediation, AHU's and HVAC's, Kitchen Exhaust Duct odour and Grease removal, Hospitals, Clinics, Medical Centres, Laboratories, Classrooms, Offices for air sanitization (ozone kills germs, viruses, bacteria including Covid-19) and for general air freshening.
USES:	Serious Odour, mould and VOC removal in large spaces; large area disinfection and air purification.
GENERATION METHOD:	High Output, High Efficiency, Ultra Long Life (2+ Years) American Made UV Tubes. Our UV Tubes are made exclusively for ProMedUSA
OZONE OUTPUT:	Depending upon the model, the maximum ozone output ranges from 3,000 mg/hr to 15,000 mg/hr. Ozone output level is adjustable.
TREATMENT AREA:	Depending upon model, up to 1,500 M ³ in 10-15 minutes, 60,000 M ³ in about 1-2 hours.
DIMENSIONS:	60 cm long X 23 cm wide X 18 cm high; Weight is 8 to 11 kg
FEATURES:	Each UV SG3000 series unit comes standard with a 9 position LED Electronic Timer (10 min, 30 min, 1,2,4,8,12,18,36 hours, and 3 rear switches to adjust the ozone output level.
CONSTRUCTION:	The exterior case is beautiful brushed, rust proof, 18 gauge surgical grade stainless steel. Each UV SG-3000/4200/7000 and 15,000 is built and designed to be virtually indestructible and last for years.
ELECTRICAL:	110-120VAC 60Hz, or 220-240V 50Hz, 225 to 600 watts
6 YEAR WARRANTY:	The UV SG3000 Series has an international 6 Year Warranty against all defects in materials and workmanship. Our UV Tubes are guaranteed for 2 full years .
UV TUBE LIFE EXPECTANCY AND COST:	Generally, 2 to 4 Years. Replacement UV Tube cost is only \$225.00 ea.
MAINTENANCE:	Easy, Simple, and Minimal. Just replace the rear filter when dirty (usually every 3 months or so) and throw it away. It takes just 1 minute and you can do it yourself.

ProMedUSA Pte Ltd • 111 North Bridge Road • #08-27 Peninsula Plaza • Singapore 179098
Tel: (65) 6836-9665 • www.promedusa.us • sales@promedusa.us

SINGAPORE • MALAYSIA • INDONESIA • BRUNEI • THAILAND • CAMBODIA • MYANMAR • VIETNAM • CHINA