


**MODEL UV SG SG3000T36**  
**Professional Commercial UV Ozone Generator**

**USES:**

The ProMedUSA UV SG3000T36 series ozone generators are designed for use as very high output commercial odour and disinfection treatment tools. They are ideal for use in bin centres, hotel housekeeping, stewarding, F&B, restoration use, mold remediation, AHU's and FC's, malls, airports, medical centres, clinics and for air sanitization (ozone kills germs, viruses including H1N1, HFMD, E.Coli, Salmonella, MSRA, Staph, etc.).

They are exclusively made in Canada and the USA for ProMedUSA with the highest quality components to extremely rigorous standards and while each unit is guaranteed for 6 years, the actual lifespan may exceed 10 years with routine care.

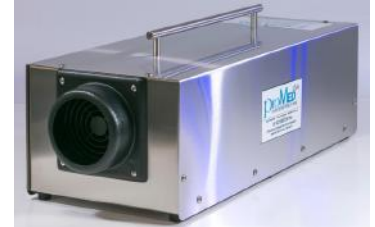

**OZONE GENERATION METHOD:**

High Output, Hi-Efficiency Ultra Long Life American made UV Tubes

**OZONE OUTPUT:**

600, 1200, 1800, 2400 and 3000 MG/HR in 5 selectable levels with rear panel switches

**EFFECTIVENESS:**

The SG3000 can easily freshen up to 350 M<sup>3</sup> in about 10-20 minutes  
The SG3000 can easily freshen up to 775 M<sup>3</sup> in about 20-40 minutes  
The SG3000 can easily freshen up to 11,100 M<sup>3</sup> in about 1-2 hours

**CONTROLS:**

On/Off switch, Standard LED 9 position electronic timer (Always on, 10 min, 30 min, 1,2,4,8,12,18 and 36 hours); 3 rear switches to select ozone output levels from 600 MG/HR to 3000 MG/HR

**DIMENSIONS and WEIGHT:**

61 cm Long X 23 cm Wide X 18 cm High. Weight just 8 KG

**CONSTRUCTION:**

Beautiful 18 gauge brushed surgical grade Stainless Steel

**ELECTRICAL:**

220-240V 50HZ, 2 amp; 110-120VAC 60hz is also available

**UV TUBE LIFE EXPECTANCY and REPLACEMENT COST:**

Generally 2-3 years of continuous use. Replacement tube cost is only \$175 per tube

**MAINTENANCE:**

Minimal – just clean the rear filter usually every 1-2 months, wipe the UV tubes clean several times per year. Entire process takes only 10 minutes or less


**WARRANTY:**

The UV SG3000T36 is FULLY GUARANTEED INTERNATIONALLY against defects in materials and workmanship for 6 YEARS. Our made in USA UV Tubes are guaranteed for a FULL 2 YEARS.

# **UV SG3000 SERIES PROFESSIONAL PORTABLE OZONE GENERATOR**

## **Professional UV Odour Removal and Air + Surface Disinfection Unit**

Exclusively manufactured in Canada and the USA  
for ProMedUSA!

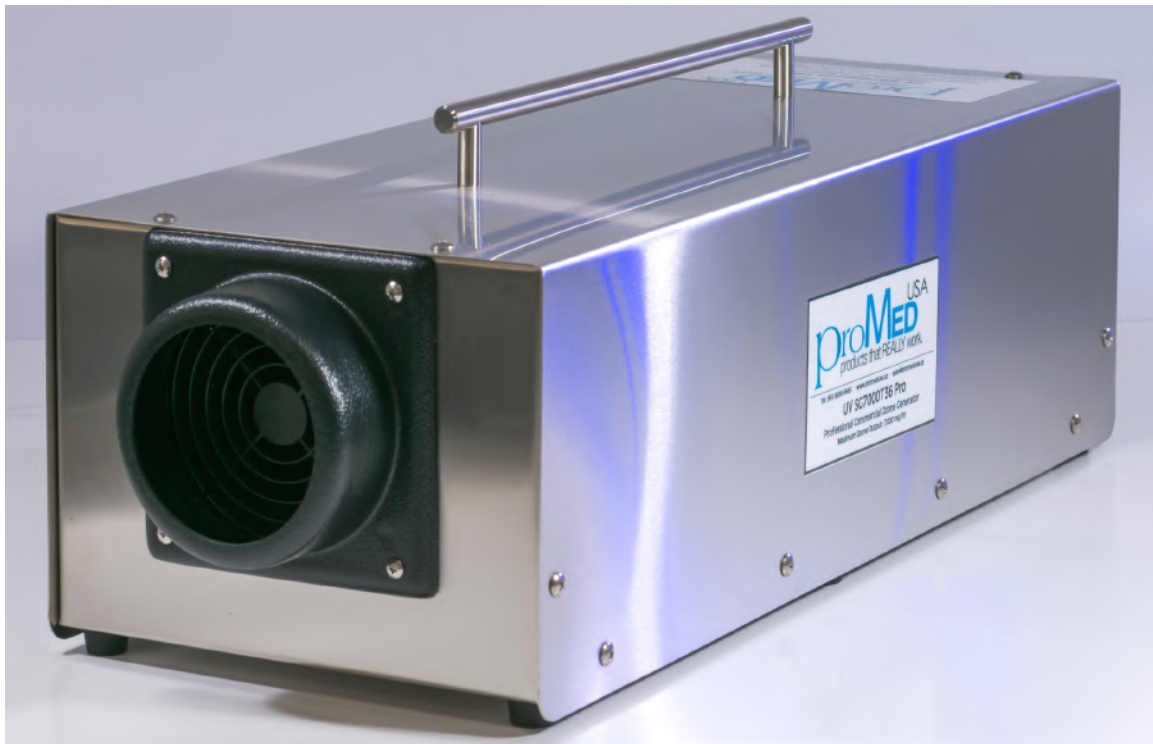

- **OZONE OUTPUT:** 600 to 3000 MG/HR (ADJUSTABLE WITH REAR SWITCHES IN 5 OZONE LEVELS)
- **DIMENSIONS:** 60 CM X 23 CM X 18 CM; **WEIGHT:** 8.0 KG
- **POWER:** 220-240VAC 50Hz, 2 Amp
- **CONSTRUCTION:** 18 GAUGE BRUSHED 316 STAINLESS STEEL
- **UNIT WARRANTY:** 6 YEAR INTERNATIONAL WARRANTY
- **TUBE WARRANTY:** 2 YEAR WARRANTY ON THE MADE IN USA UV TUBES
- **PERFORMANCE:** EASILY REMOVE ODOURS IN A 350 M<sup>3</sup> SPACE IN JUST 10-15 MINUTES; 11,100 M<sup>3</sup> SPACE IN ABOUT 1-2 HOURS