

puriclean™
complete



• LOW POWER CONSUMPTION OF 47W[^]
• INCREASED MOTOR LIFESPAN[^]
• INCREASED EFFICIENCY[^]
• REDUCED NOISE[^]
* BASED ON HIGH FAN SPEED SETTING

A4S

BREATHE WELL

4-IN-1 AIR PURIFIER

PURIFY

ELIMINATE AIRBORNE ALLERGENS & GERMS

+

HUMIDIFY

REPLENISH MOISTURE & IMPROVE HUMIDITY LEVEL

+

IONIZE

FRESHEN INDOOR AIR

+

SANITIZE

EFFECTIVE AGAINST VIRUSES & BACTERIA
(WITH NOVITA AIR PURIFYING SOLUTION CONCENTRATE)



SHOP NOW

LEARN MORE

SPECIFICATIONS

Voltage/Frequency	50 Hz/220 V				
Speed Setting	Sleep	Low	Medium	High	Turbo
Power Consumption	13 W	17 W	29 W	47 W	99 W
Air Flow Rate	170 m³/hr	210 m³/hr	330 m³/hr	430 m³/hr	600 m³/hr
Recommended Purification Coverage [◇]	17 m²	21 m²	33 m²	43 m²	60 m²
Humidification Rate	Up to 220 ml/hr				
Tank Capacity	1 Litre				
Continuous Humidification [^]	Up to 4.5 Hours (Based on High Fan Speed Setting)				
Noise Level	38 to 65 dB				
CADR (Particulate) [□]	282 CFM / 480 m³/hr				
Dimension (W x D x H)	401 mm X 232 mm x 662 mm				
Empty Weight	11.3 Kg				
PuriClean Complete™ Filtration System	Step 01: Washable Mesh Filter Step 02: Cool Catalyst Filter Step 03: Granular Activated Carbon Filter Step 04: 99.97% True HEPA Filter Step 05: Humidifying Filter Step 06: Built-In Ionizer (Semi-Permanent) Step 07: novita Air Purifying Solution Concentrate (Optional)				
Filter Unit Capacity*	• 3-in-1 Filter (Cool Catalyst + Granular Activated Carbon + 99.97% True HEPA) Suggested Replacement 24 Months* (Approx. 9,000 hours) • Humidifying Filter Suggested Replacement 12 Months				
Negative Ion Density ⁺	Up to 60 Million/cm³				
Optional Product Accessory	novita Air Purifying Solution Concentrate				

◇ The recommended coverage area is based on normal domestic indoor environment usage.
[^] The humidification rate may vary subjected to environmental condition, indoor temperature and humidity level.
[□] The clean air delivery rate (CADR) in terms of Particulate removal is performed in accordance to GB/T 18801-2015 Standard. CFM unit is equivalent to ft³/min, m³/hr unit is derived from CFM conversion. Based on novita PM2.5 filter.
⁺ Based on average excellent indoor air quality, 12 hours a day, 7 days a week usage under normal domestic indoor environment.
⁺ Negative ion density measured is based from source emission.

HARMONIZING SCIENCE AND INNOVATION,
BREATHE CONFIDENTLY WITH THE NOVITA
4-IN-1 AIR PURIFIER A4S!

Powered by a DC brushless motor system, this versatile unit Purifies, Humidifies, Ionizes and Sanitizes all at once, to satisfy your diverse air quality needs. Driven by the PuriPRO™ filtration system and evaporation technology, it works to effectively eliminate airborne allergens and germs, all while improving the humidity level for a comfortable and healthier living.


Complementing with the novita Anti-Bac Solution, formulated with the NSF certified and EPA registered active ingredient, it proactively sanitizes the air by oxidizing 99.99% bacteria & virus through the humidification function, to protect you and your loved ones!

Breathe Safe, Breathe Clean, Breathe Well with A4S the ideal all-in-one air purifier for your living space all day, every day!



novita
AIR • WATER • BODY

PURICLEAN COMPLETE™ SYSTEM

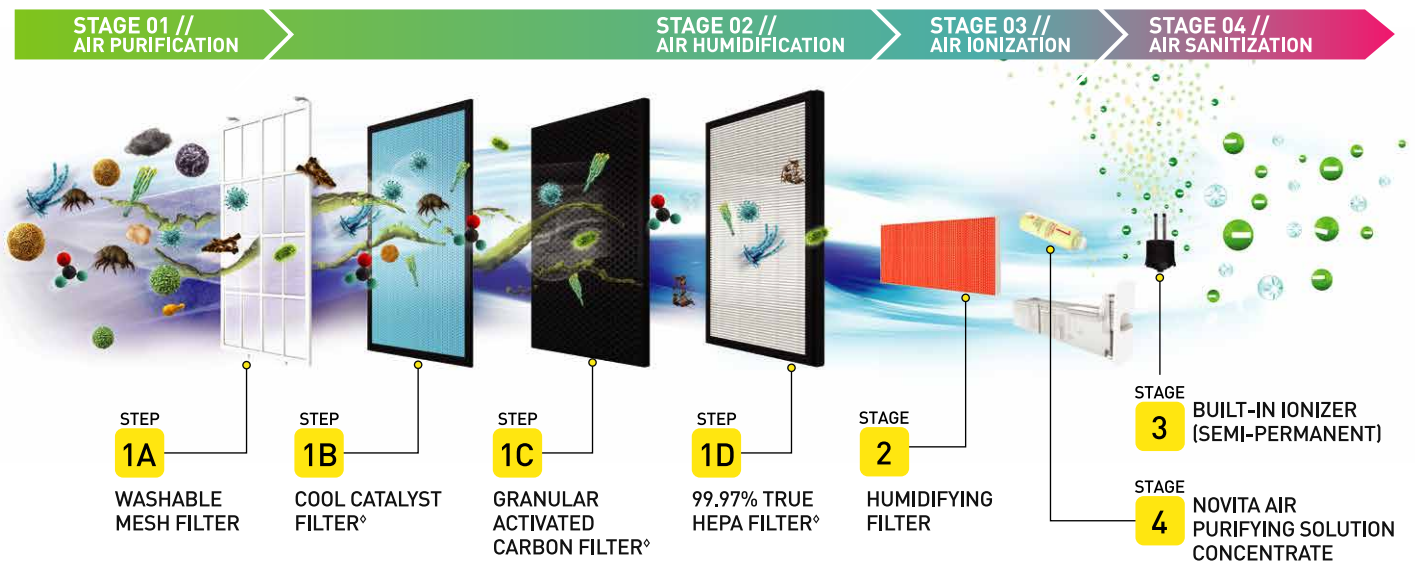

LEGEND

ALLERGENS



GERMS



• The contaminants are magnified for better illustration purposes only and they are not in actual proportion to the Filters.

STAGE 01 // AIR PURIFICATION

STEP A: WASHABLE MESH FILTER

Washable Mesh Filter provides the first layer of air filtering system by capturing larger particles to improve the durability and enhance performance of subsequent filters.

FUNCTION • Trap large particles such as hair, scurf, coarse particulates and fine dust present in the air.

STEP B: COOL CATALYST FILTER[°]

Cool Catalyst Filter produces reactive oxidants to oxidize and eliminate airborne germs and harmful volatile organic compounds (VOCs). This reaction breaks down the contaminants into carbon dioxide and water molecules under normal room temperature environment.

FUNCTION • Oxidize and eliminate airborne germs and harmful volatile organic compounds (VOCs).

STEP C: GRANULAR ACTIVATED CARBON FILTER[°]

Granular Activated Carbon Filter removes unpleasant odours and chemicals in the air with its highly adsorbent granules. Each granule contains millions of microscopic pores to provide a large surface area capacity to adsorb volatile organic compounds (VOCs), unpleasant odour and airborne chemicals.

FUNCTION • Adsorb volatile organic compounds (VOCs), unpleasant odour and airborne chemicals.

STEP D: 99.97% TRUE HEPA FILTER[°]

A True High Efficiency Particulate Absorbing / Arrestance or True HEPA Filter has high air filtering efficiency. It is capable of removing up to 99.97% of airborne allergens and germs with a size of 0.3 micrometers in diameter which includes very fine dusts, haze and smoke particulates, pet dander, mold spores, pollen some bacteria and viruses.

FUNCTION • Remove up to 99.97% of airborne allergens and germs such as fine dusts, haze and smoke particulates, pet dander, mold spores, pollen, some bacteria and viruses.

[°]Cool Catalyst Filter, Granular Activated Carbon Filter and 99.97% True HEPA Filter are combined as a single filter unit.

STAGE 02 // AIR HUMIDIFICATION

Adopting an evaporation technology, the humidifying filter fitted inside the water tank, absorbs the moisture and releases it into the surrounding air to help to improve the relative humidity level.

FUNCTION • Replenishes moisture into the surrounding air, creating an improved humidity for a comfortable and healthier living.

STAGE 03 // AIR IONIZATION

BUILT-IN IONIZER (SEMI-PERMANENT)

Semi-Permanent Built-in Ionizer produces million of negative ions to promote air purification through the elimination of airborne allergens and germs. Negative ions also help to freshen up the air quality.

FUNCTION • Eliminate airborne allergens and germs such as pollen, dust mites, pet dander, mold spores, bacteria, fungi and viruses.

STAGE 04 // AIR SANITIZATION

novita Air Purifying Solution Concentrate is formulated with NSF certified and EPA registered active ingredient from USA, to reduce the potential risks from the airborne threats. Introduced into the surrounding air through the 4-In-1 humidification function, the vaporized concentrate containing the active ingredient is encapsulated by the negative ions from the built-in ionizer. It diligently targets and attracts the bacteria & virus such as H1N1 & Rotavirus via the electrostatic technology, and achieving an elimination efficiency of 99.99% against E.Coli & S. Aureus, to protect you and your loved ones!

FUNCTION • Oxidizes bacteria & virus, eliminate unpleasant odour, eliminate VOCs and freshen up the air quality.