
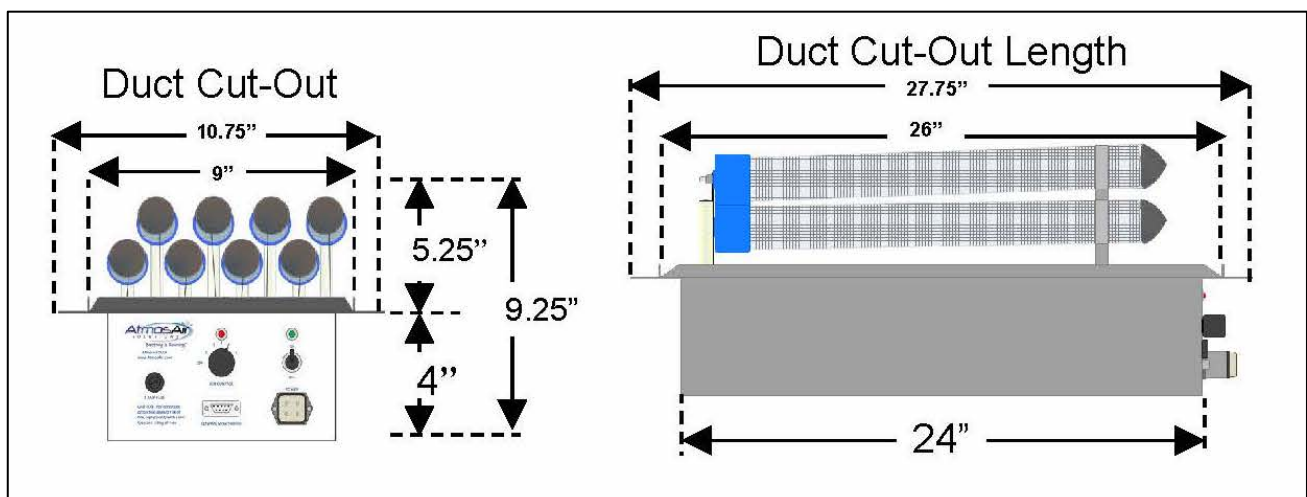


APPLICATION

The AtmosAir 508 Series bipolar ionization system is designed for mounting in the supply duct or air handler of a heating, cooling or ventilating system. Ionization can be adjusted with a 5 step knob.

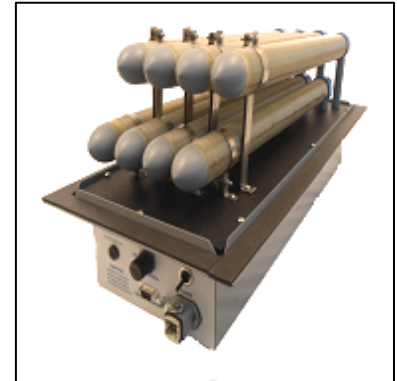

SPECIFICATIONS

- Air Flow Capacity: Up to 25,000 CMH
- Pressure Drop: Minimum
- Weight: 10 KG
- Housing Material: 22 gauge powder coated steel
- Maximum Temperature: 65°C
- Input Voltage: 120-240VAV, 50/60Hz, 50 Watts
- Number of tubes: Up to 8 Tubes
- Ionization Tube: Multi-core Composite Stainless Steel
- AtmosAir Tube Size: 534mm
- Rated Tube Life: 17,600 hours (approx. 2+years)