



Model: SG-WDS

# SG-WDS Ozone Water Disinfection System

## Features



**Electrolysis technology**  
 Only need water and electricity, no treatment chemicals necessary.



**Tested and Approved**  
 Tested by independent 3rd party laboratories including SGS



**Instant Start**  
 No waiting time, the SG-WDS automatically runs for your safety.



**High Concentration 2ppm**  
 Patented ozone storage system, industry-leading concentration.



**Simple Installation**  
 Easy installation into existing water supply.

## Inspired by Nature

*Turns tap water into an effective and safe sanitizer*

Ozone Water Disinfection System (WDS) applies a revolutionary electrolysis technology that can **convert your regular tap water into an anti-bacterial sanitizing wash water**. The system is designed for easy integration into existing piping offering on-demand and instant sanitation from your tap water. It works to protect against pathogens **without using hazardous chemicals**.

This system is ideal for environments where there is a risk of microbial contamination like **HORECA, hospitals, clinics, nursing homes, office, public toilet, schools and kindergartens**.



**99.99%**  
 Removals Bacteria & Viruses

Pathogen control for E coli, Salmonella, Listeria and other common pathogens. Ozone offers a better and more **comprehensive solution than chloric(I) acid and other chlorine-based disinfectants**.



**5 seconds**  
 Achieve 99.99% sanitizer rate

Disinfection speed is **3000 times faster than chlorine**. Ozone is more friendly to the environment for disinfection than chemical disinfectants.



**Safety**  
 No matter how much you use

After disinfection, ozone reverts to oxygen **without changing the taste and texture of food and water**, and will not cause irritation to the skin. **Ozone eliminates concerns about accidental chemical sanitizer consumption**.

# Focus Points

**HORECA**



**Hospitals & Clinics**



**Schools & Kindergartens**



**Nursing Homes**



**Public Toilets**



**Work Spaces**



## Cartridge Life

- Up to 1 million liters, depending upon water quality and operation mode
- Indicator light shows cartridge status for easy maintenance

## Warranty

- Limited warranty against defects in materials and workmanship for 2 years
- 1 year cartridge life
- Normal usage exclusions apply, detailed in Operation Manual

## MSDS - The same as tap water

HEALTH	7	0
FLAMMABILITY	0	
PHYSICAL HAZARD	0	
PERSONAL PROTECTION	A	




# Specifications

Connection	3/4"
Concentration	Max. 2.0 ppm
Flow Rate (at 3 kg/cm <sup>2</sup> )*	500 - 1000 LPH
Max. Pressure	7 kg/cm <sup>2</sup> (100psi)
Power	AC 100-240V, 50/60Hz, 100W
Water Quality	Clean Tap Water**
Optimal Water Temperature	1-40°C (34-104°F)
Dimensions	128.5 x 140 x 210.5 mm
Weight (Net)	1.3 kg


\* Recommended flow for application      \*\* TDS 60-300 mg/l, Hardness < 180 mg/l as CaCO<sub>3</sub>  
 Note: WDS does not replace water filtration. For best results, always connect WDS in the water supply behind the filtration system.


# Configuration

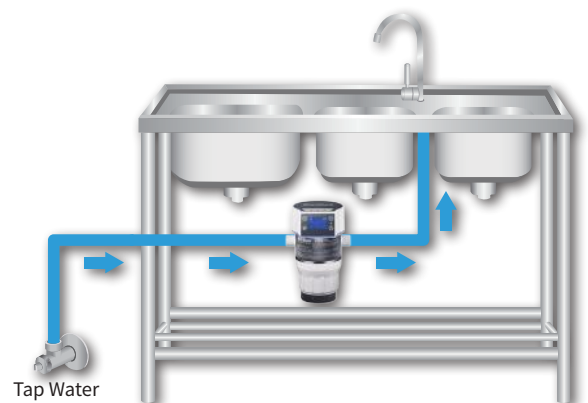

## About Us

Since 1988, BES Group has been the global leader in electrolytic technology. Converting water to ultra pure ozone gas and hydrogen gas is our core technology. Series products include Food Safety & Sanitation, Healthy Environment, Clean Water, and Sanitation & Wellness. All products and components are tested for high performance, safety, and reliability with required certifications from government agencies and leading 3rd party labs.

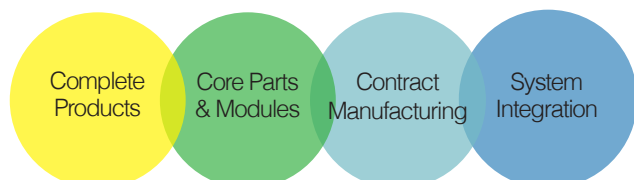

**USA**   
**BIOSURE North America, LLC.**  
 2020 Babcock Rd., Ste. 25  
 San Antonio, Texas - USA  
[www.besgroups.com](http://www.besgroups.com)

**China**  
 Shanghai Zhongte Environmental Technology Co., LTD  
 Room 308, Building D, 1058, South Shenbin Rd,  
 Minhang, Shanghai 201106 China  
[www.besgroup.com.cn](http://www.besgroup.com.cn)

**Headquarters**  
**Biotek Environmental Science Ltd.**  
 5F, 98 Xingde Rd, Sanchung Dist,  
 New Taipei, 24158 Taiwan  
[www.besgroups.com](http://www.besgroups.com)

*Technologies applied are protected by one or more of the following patents:  
 US 8,308,914 B2, US 9,757,697 B2, US 9,248,208 B2*

**SINGAPORE**  
**ProMedUSA Pte Ltd**  
 116 Middle Road, #09-01D  
 ICB Enterprise House  
 Singapore 188972  
[www.promedusa.us](http://www.promedusa.us)

**Manufacturing** ISO 9001 Certified  
**Yantai United Ozonetec Corporation.**  
 4F, 1 Wuzhishan Rd, ETDZ  
 Yantai, Shandong 264006 China  
[www.besgroup.com.cn](http://www.besgroup.com.cn)

