

SGWAD-12

Air Dryer

KEY FEATURES:

- Produces up to 12 LPM of Dry Air
- Universal voltage 110-240VAC, 50/60Hz, 200 Watts
- Wall Mountable
- 460 X 314 X 92mm, 8Kg
- Ideal Operating Humidity:
 - 80% RH at 31°C
 - 50% RH at 40°C
- cETLus and CE
- 3 Year Warranty


PRODUCT DESCRIPTION

The SGWAD-12 is a wall mountable Air Dryer that will produce up to 12 LPM dry air and can be operated 24/7 if desired.

It was designed to provide dry air as a feed gas for up to 8 SGWV-0.5 Ozone Generators (depending upon environmental conditions) and up to 3 SGWV-K4 Ozone Generators (again, depending upon environmental conditions).

Air Drying is performed with 2 automatically recharged alumina desiccant cylinders.

The output is suction (vacuum) driven from the ozone generator.

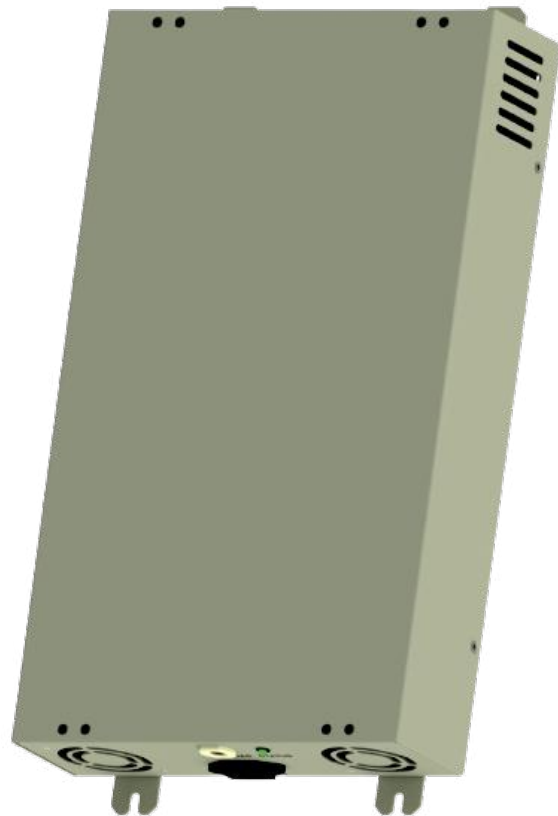

ProMedUSA Pte Ltd

Asia's most trusted source for
advanced ozone systems

ProMED USA
products that REALLY work.