

SGWAD-32

Air Dryer

KEY FEATURES:

- Produces up to 32 LPM of Dry Air
- Universal voltage 110-240VAC, 50/60Hz, 225 Watts
- Wall Mountable
- 460 X 314 X 92mm, 8.2Kg
- Ideal Operating Humidity:
 - 80% RH at 31°C
 - 50% RH at 40°C
- cETLus and CE
- 3 Year Warranty

ProMED USA
products that REALLY work.


PRODUCT DESCRIPTION

The SGWAD-32 is a wall mountable Air Dryer that will produce up to 32 LPM dry air and can be operated 24/7 if desired.

It was designed to provide dry air as a feed gas for up to 2 SGWV-K10 Ozone Generators (depending upon environmental conditions) and up to 6 to 8 SGWV-K4 Ozone Generators (again, depending upon environmental conditions).

Air Drying is performed with 2 automatically recharged alumina desiccant cylinders.

The output is suction (vacuum) driven from the ozone generator.

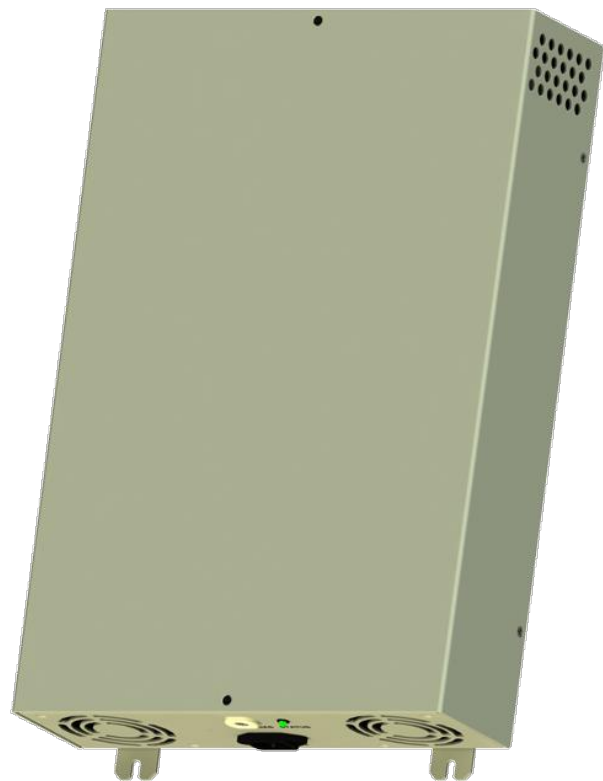

ProMedUSA Pte Ltd

Asia's most trusted source for
advanced ozone systems