

lotus[®] PRO V9

Using patented technology, **lotus[®] PRO V9** transforms tap water into **Stabilized Aqueous Ozone (SAO[®])**: your simple, safe, sustainable alternative to traditional chemicals.

As an all-in-one cleaner, disinfectant*, and deodorizer, SAO **replaces up to 90% of chemicals** in the janitor's closet, reducing costs, simplifying processes, and improving your site's safety and sustainability.

As the world's first dispenser to use IoT, lotus PRO V9 sends real-time data to the **iClean[®] Dashboard**, providing analytical insights on all dispenser activity.



- ✓ **Simple:** no more purchasing, transporting, storing, or managing various cleaning chemicals.
- ✓ **Safe:** free of toxins, irritants, fragrances, dyes, preservatives, quats, and residues.
- ✓ **Smart:** captures and reports live usage and sustainability data on the iClean Dashboard.
- ✓ **Sustainable:** provides significant plastic, chemical, and carbon reductions.

SAO[®] is an All-In-One Solution

- Glass, mirrors, stainless steel, chrome
- Flooring, hardwood, tile, vinyl
- Concrete, terrazzo, stone
- Carpet, fabric
- Shelving, seating, tables
- Showers, bathtubs, toilets, sinks
- Electronic devices
- Handrails, escalators, elevators



SIMPLE · SAFE · SUSTAINABLE

HEALTH	0
FLAMMABILITY	0
PHYSICAL HAZARD	0
PERSONAL PROTECTION	A



TECHNICAL SPECIFICATIONS

DEVICE: lotus[®] PRO V9 | **SOLUTION:** Stabilized Aqueous Ozone (SAO[®])

The **lotus[®] PRO V9** uses patented technology to convert tap water into **Stabilized Aqueous Ozone (SAO[®])**: a simple, safe, sustainable alternative to traditional cleaners.

Dispense SAO into spray bottles, mop buckets, floor scrubbers, or carpet extractors for cleaning, disinfecting, and deodorizing.

With **IoT integration**, lotus PRO V9 sends data to the **iClean Dashboard**, allowing users to track usage and sustainability insights in real time.



lotus [®] PRO V9		Cartridge	SAO-4	SAO-24
Model Number	LQFC225 (NA) LQFC275 (International)	Model Number	LCA114K-FB	LCA118K-FB
Dimensions	57 x 47 x 25 cm (22 ½" x 18 ½" x 10")	Disinfecting	4 Hours	24 Hours
Net Weight	11.3 kg (25 lbs)	Cleaning	3 Days	6 Days
Flow Rate	Up to 11.5 lpm (3 gpm)	Cartridge Life	5,000 Liters (1,325 Gallons)	3,000 Liters (800 Gallons)
O₃ Concentration	Up to 1.7 ppm	Dimensions	49 x 18 x 21 cm (19 ¼" x 7 ¼" x 8 ¼")	49 x 18 x 21 cm (19 ¼" x 7 ¼" x 8 ¼")
Power	Standard 110V & 220V 110 watts	Weight	7.5 kg (16.5 lbs)	7.5 kg (16.5 lbs)
Water Temperature	4-40 °C (39-104 °F)			
Water Quality	Clean, TDS 60-200 ppm			
Wi-Fi Network	2.4 GHz			
Backflow	Built-in mechanical backflow prevention			
Automatic Shut Off	30 minutes			



The New TERSANO Lotus PRO V9 (with IOT)



lotus® PRO V9

Using patented technology, lotus® PRO V9 transforms tap water into **Stabilized Aqueous Ozone (SAO®)**: your simple, safe, sustainable alternative to traditional chemicals.


As an all-in-one cleaner, disinfectant*, and deodorizer, SAO eliminates up to 90% of chemicals in the janitor's closet, reducing costs, simplifying processes, and improving your site's safety and sustainability.

For the first time, lotus PRO V9 uses IoT to connect to the iClean® Dashboard, an online platform that reports usage and sustainability data in real-time to help you lead an even more productive cleaning program.

Make the switch to tersano today and change the way your site cleans for good.

Product Specifications

lotus PRO V9 fits seamlessly into the janitor's closet and plumbs directly into standard water taps. As the water travels through the SAO cartridge, it treats the water to strengthen the stability of the ozone in the solution. As a result, SAO is an approved disinfectant* for up to 24 hours and cleaner for up to 6 days.

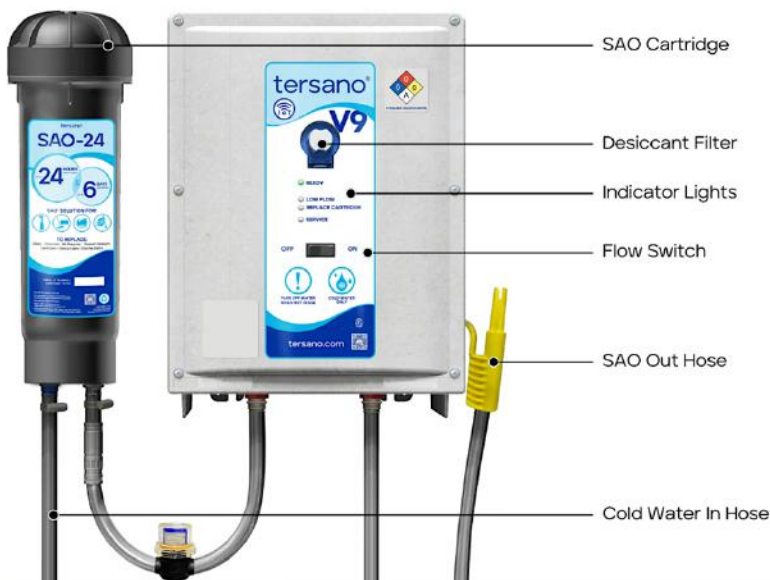

PRODUCT SPECIFICATIONS	
Dimensions	22 ½" x 18 ½" x 10" (57 x 47 x 25 cm)
Net Weight	25 lbs. (11.3 kg)
Wi-Fi Network	2.4 Ghz
O ₃ Concentration	Up to 1.7 ppm (0.5 and 1.2 mg/liter)
Flow Rate	Up to 11.5 lpm

CERTIFICATIONS



HEALTH	/ 0	
FLAMMABILITY	0	
PHYSICAL HAZARD	0	
PERSONAL PROTECTION	A	

Tersano Ozonated Water MSDS

Contact us. We are your local authorized and experienced Tersano dealer:

ProMedUSA Pte Ltd
 111 North Bridge Road
 #08-27 Peninsula Plaza
 Singapore 179098
 Tel: 6836 9665

Email: Tersano@promedusa.us